

- Never force a connector into a port. If the connector and port do not join with reasonable ease, they probably do not match. Make sure that the connector matches the port and that you have positioned the connector correctly in relation to the port.
- Operate your Spreengs™ card in a place where the temperature is between 14°F and 122°F (-10°C and 50°C).
- Store your Spreengs™ card in a place where the temperature is between 32°F and 95°F (0°C and 35°C).
- The play time of your Spreengs™ card may temporarily shorten in low-temperature conditions.
- Keep your Spreengs™ card away from sources of liquids (such as drinks, washbasins, bathtubs, shower stalls, rain, etc.)
- Do not attempt to open your Spreengs™ card, disassemble it, or remove the battery: you run the risk of electric shock, permanently damaging the card and voiding the warranty.

You can remove the tutorial audio clip from your card by opening the “Removable Storage Disk” folder related to the Spreengs™ card on your computer and deleting the audio file entitled “spreengs.mp3”.

### Troubleshooting

Visit us on the web to see our FAQs and updated troubleshooting instructions.

[www.spreengs.com/support](http://www.spreengs.com/support)

[info@spreengs.com](mailto:info@spreengs.com)  
[www.spreengs.com](http://www.spreengs.com)



AUDIO CARD

**Start Here**

**Congratulations** on purchasing your Spreengs™ card!

Read this section to get started.

Spreengs™ cards are compatible with any computer. Simply import audio clips from any device onto your computer, and then connect your Spreengs™ card to transfer your files and send it to your friends and loved ones.

If you are new to Spreengs™, watch the tutorial at [www.spreengs.com](http://www.spreengs.com)

## **Four simple steps to playing your videos, pictures and music on your Spreengs™ card:**

### **Step 1: Open the Spreengs™ card package**

Your Spreengs™ card package includes the following items:

- One Spreengs™ card
- One micro USB cable
- One envelope
- One instructions manual

### **Step 2: Connect your Spreengs™ card to your computer (PC or Mac)**

Spreengs™ cards are compatible with any computer. Connect your card to your computer using the cable connection. The micro USB port should be connected to the opening in the back or on the side of your card and the 2.0 USB port in your computer.

- **For PC installation:** a pop-up message will appear on

your screen with the following message: “Found New Hardware”. Wait for the install to finish – Windows XP, Vista, 7 or 8 will automatically install the driver, no additional driver is needed.

- **For Mac OS installation:** A “Removable Disk” icon entitled “Spreengs” appears in your Finder.

### **Step 3: Import your audio clips to your Spreengs™ card**

After connecting the Spreengs™ card to your computer, a removable storage disk device entitled “Spreengs” should appear on your computer. Double-click on this icon to manage your Spreengs™ data content. Spreengs™ cards are designed to play one or more audio clips. Content can be added/removed directly from the root folder.

The supported file types by Spreengs™ are:  
MP3, WMA, WAV

### **Step 4: Safely disconnect your Spreengs™ card from your computer**

- **For PC disconnecting:** click on the “Safely Remove Hardware and Eject Media” shortcut at the bottom, right corner of the screen and select “Safely Remove USB Mass Storage Device”. Disconnect your card from its USB cable and enjoy your audio clips on your Spreengs™ card.
- **For Mac OS disconnecting:** eject the Removable Disk related to your Spreengs™ card. Disconnect your card from its USB cable and enjoy your audio clips on your Spreengs™ card.

### **To recharge your Spreengs™ card battery**

When the Spreengs™ card is connected to a USB port in your computer, the battery is automatically charging. You can also recharge your Spreengs™ card using a USB Power Adapter (not included in the Spreengs™ package).

## **Cleaning, Handling and Safety**

### **Cleaning**

Follow these general rules when cleaning the outside of your Spreengs™ card and its components:

- Make sure your Spreengs™ card is unplugged from your computer before attempting to clean it.
- Use a damp, soft, lint-free cloth to wipe the screen. The cloth can be moistened with screen solution. Avoid getting any moisture in openings.

- Do not use aerosol sprays, solvents, alcohol or abrasives anywhere near your Spreengs™ card.

### **Handling**

Your Spreengs™ card may be damaged by improper storage or handling. Be careful not to drop your Spreengs™ card during use or transport.

### **Important Safety Instructions**

When setting up and using your Spreengs™ card, remember to follow all instructions and warnings. Keep these instructions handy for reference by you and others.