

- Make sure your Spreengs™ device is unplugged from your computer before attempting to clean it.
- Use a damp, soft, lint-free cloth to wipe the screen. The cloth can be moistened with screen solution. Avoid getting any moisture in openings.
- Do not use aerosol sprays, solvents, alcohol or abrasives anywhere near your Spreengs™ device.

Handling

Your Spreengs™ device may be damaged by improper storage or handling. Be careful not to drop your Spreengs™ device during use or transport.

Important Safety Instructions

When setting up and using your Spreengs™ device, remember to follow all instructions and warnings. Keep these instructions handy for reference by you and others.

- Never force a connector into a port. If the connector and port do not join with reasonable ease, they probably do not match. Make sure that the connector matches the port and that you have positioned the connector correctly in relation to the port.
- Operate your Spreengs™ device in a place where the temperature is between 14°F and 122°F (-10°C and 50°C).
- Store your Spreengs™ device in a place where the temperature is between 32°F and 95°F (0°C and 35°C).
- The play time of your Spreengs™ device may temporarily shorten in low-temperature conditions.
- Keep your Spreengs™ device away from sources of

liquids (such as drinks, washbasins, bathtubs, shower stalls, rain, etc.)

- Do not attempt to open your Spreengs™ device, disassemble it, or remove the battery: you run the risk of electric shock, permanently damaging the device and voiding the warranty.

You can remove the tutorial video from your device by opening the “Removable Storage Disk” folder related to the Spreengs™ device on your computer and deleting the video file entitled “spreengs.mp4”.

Troubleshooting

Visit us on the web to see our FAQs and updated troubleshooting instructions.

www.spreengs.com/support



info@spreengs.com
www.spreengs.com

Start Here

Congratulations on purchasing your Spreengs™ device!
Read this section to get started.

Spreengs™ devices are compatible with any computer. Simply import videos, pictures and music from any other electronic device onto your computer, and then connect your Spreengs™ device to transfer your files and send to your loved ones.

If you are new to Spreengs™, watch the tutorial at www.spreengs.com

Four simple steps to playing your videos, pictures and music on your Spreengs™ device:

Step 1: Open the Spreengs™ device package

Your Spreengs™ device package includes the following items:

- One Spreengs™ device
- One micro USB cable
- One envelope (if you have purchased a card)
- One instructions manual

Step 2: Connect the Spreengs™ device to your computer (PC or Mac)

Spreengs™ devices are compatible with any computer. Connect your device to your computer using the cable connection. The micro USB port should be connected to the opening in the back, on the side, or on the inside of your device and the 2.0 USB port to your computer.

- **For PC installation:** a pop-up message will appear on

your screen with the following message: “Found New Hardware”. Wait for the install to finish – Windows will automatically install the driver, no additional driver is needed.

- **For Mac OS installation:** A “Removable Disk” icon entitled “Spreengs” appears in your Finder.

Step 3: Import your video to the Spreengs™ device

After connecting the Spreengs™ device to your computer, a removable storage disk device entitled “Spreengs” should appear on your computer. Double-click on this icon to manage your Spreengs™ data content. Spreengs™ devices are designed to play videos, pictures and music files. Content can be added/removed from the existing 3 sub-folders: “MUSIC”, “PICTURES” and “VIDEO”, depending on file type.

Your Spreengs™ device is designed to play video files first. Picture and music files are played second and simultaneously (therefore a slideshow of the pictures will play with background music).

Note: if the “VIDEO” sub-folder is empty, the Spreengs™ device will automatically begin a slideshow using the pictures in the “PICTURES” sub-folder (along with background music if music files have been downloaded into the “MUSIC” sub-folder).

The supported file types by Spreengs™ devices are:

- **Video:** AVI, MP4, H.263, WMV, MPG, MPEG-I, MPEG-II
- **Audio:** MP3, WMA, WAV, OGG, FLAC, AAC, AMR, RA
- **Photo:** JPEG, BMP, GIF, PNG, TIF

Step 4: Safely disconnect your Spreengs™ device from your computer

- **For PC disconnecting:** click on the “Safely Remove Hardware and Eject Media” shortcut at the bottom right corner of the screen and select “Safely Remove USB Mass Storage Device”. Disconnect your device from its USB cable and enjoy your videos, pictures, and music on your Spreengs™ device.
- **For Mac OS disconnecting:** eject the Removable Disk related to your Spreengs™ device. Disconnect your device from its USB cable and enjoy your videos, pictures, and music on your Spreengs™ device.

To recharge your Spreengs™ device battery

When the Spreengs™ device is connected to a USB port in your computer, the battery is automatically charging. You can also recharge your Spreengs™ device using a USB Power Adapter (not included in the Spreengs™ package). The battery status appears on the screen of your device: it will have an increasing signal when the battery is charging and a complete signal when the battery is fully charged. If you don't see the battery status signals, try connecting your Spreengs™ device to another USB port.

Cleaning, Handling and Safety

Cleaning

Follow these general rules when cleaning the outside of your Spreengs™ device and its components: